


Do not stake unless in heavy clay soil, windy conditions, 3" or greater diameter tree trunk or large crown. If staking is needed due to these conditions:

- Stake with 2 x 2 hardwood stakes, or approved equal, driven 6" - 8" outside of rootball.
- Loosely stake tree trunk to allow for trunk flexing.
- Stake trees just *below* first branch with 2" - 3" wide belt-like, nylon or plastic straps (2 per tree on opposite sides of tree, connect from tree to stake horizontally. *Do not* use rope or wire through a hose.)
- Remove all staking materials after 1 year.

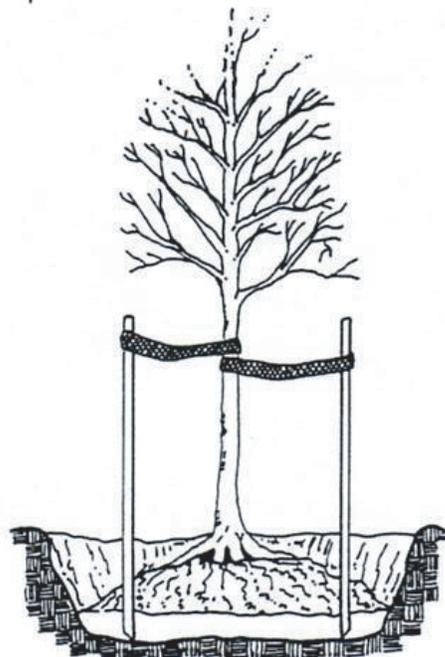

TREE PLANTING DETAIL

SCALE: NO SCALE