



REMOVE CAP AND INSERT
POLY-PIG SWAB

REPLACE CAP AND ATTACH
PRESSURE HOSE TO 2" CORP.

USING PRESSURE PUMP, INSERT
POLY-PIG SWAB INTO WATER MAIN
TO BE SWABBED. WHEN SWAB IS IN
MAIN, STOP PUMP, CRACK G.V. AND
FLUSH MAIN.

UPON COMPLETION OF FLUSHING,
TEE TO BE REMOVED OR CAPPED
AT BRANCH FLANGE.

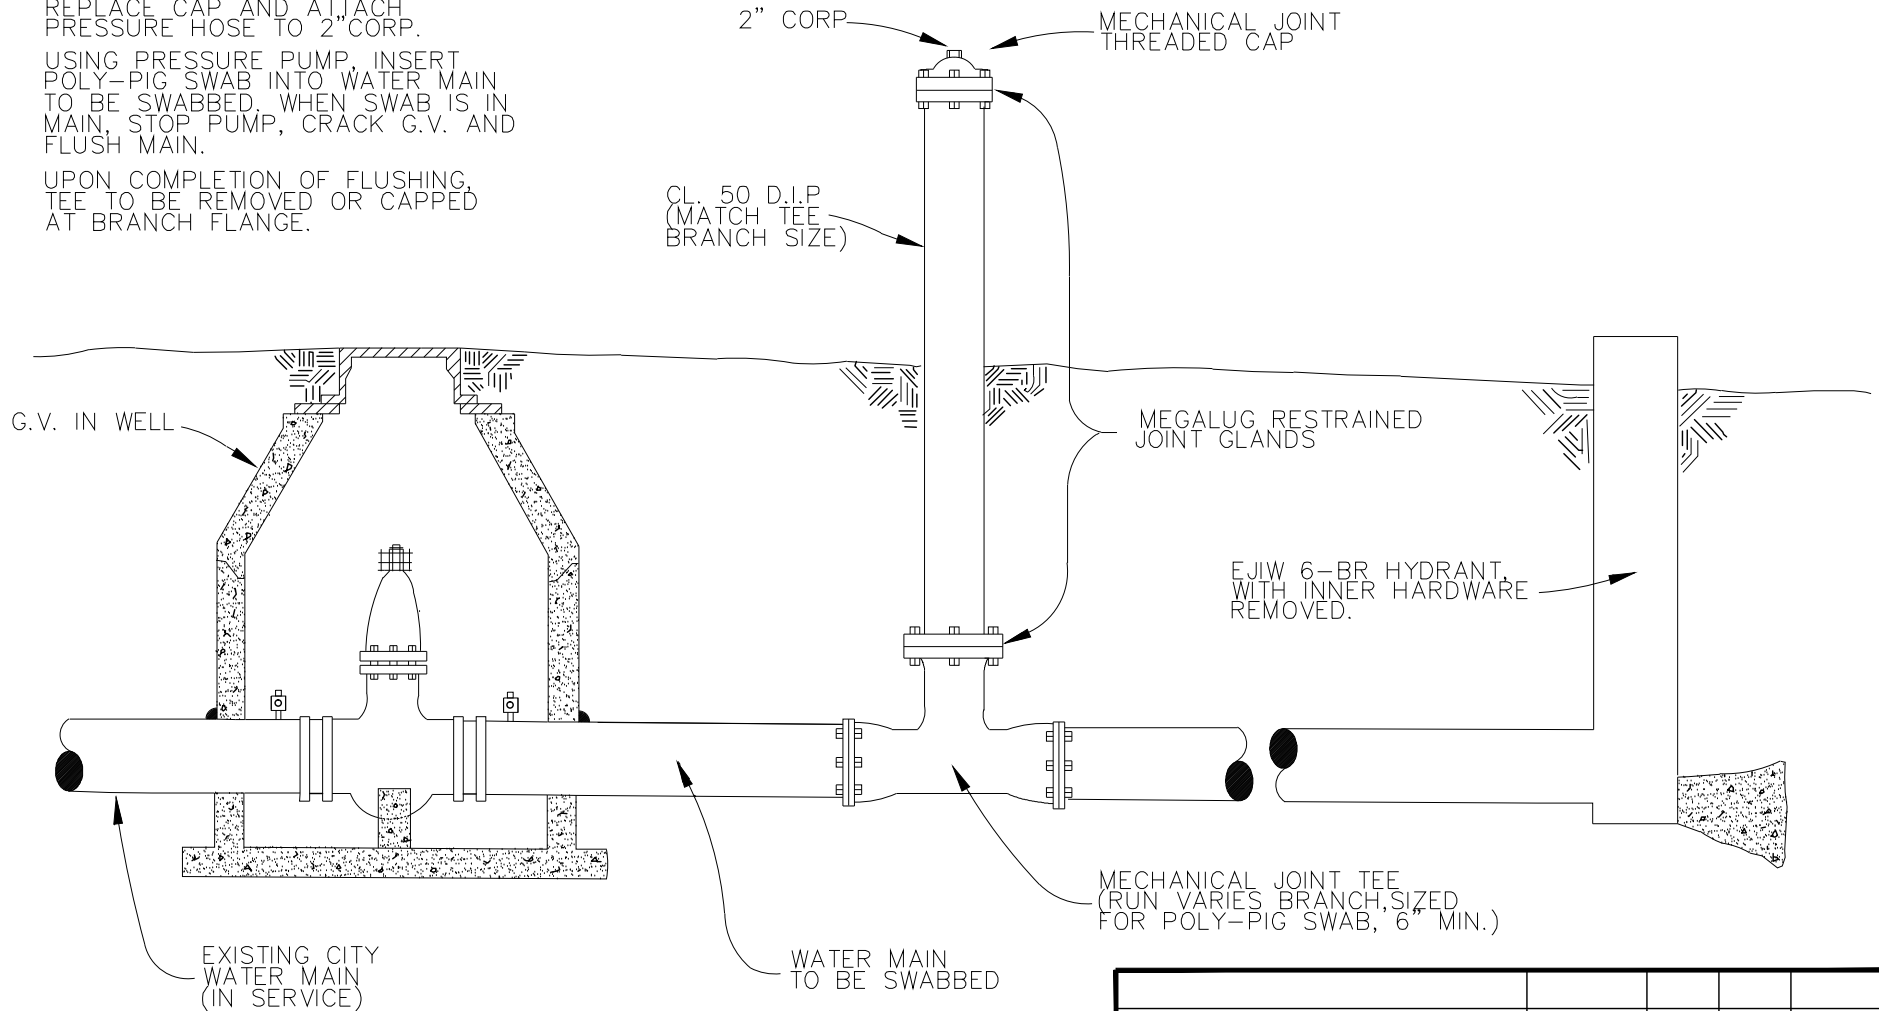

REVISIONS		REV. NO.	DR. BY	CH. BY	DATE
PUBLIC SERVICES DEPARTMENT CITY OF ANN ARBOR					
SWAB LAUNCHING TEE					
DR. BY	D.F.	CH. BY	C.S.S.	DRAWING NO.	
SCALE	NONE	DATE	11-6-92	SD-W-8	
INCH	0  1			SHEET NO. _____ OF _____	